

1. Scope

This document is to be used for field make-up acceptance of the Ares™ EUE Connection.

This procedure shall be used in conjunction with FT-RP-000 General Running Procedure and the latest revision of the Connection Data Sheet (CDS). Where conflicts exist, this connection-specific running procedure and CDS shall govern.

1.1. Product Description

Ares™ EUE Connection:

- External Upset
- Conventional Shouldered
- Thread Sealing



Figure 1 – Product Image

1.2. Approvals

Created	Angela Hill – Product Engineer	09/01/2026
Reviewed	Israel Martinez – Quality Director	09/25/2026
Approved	Wesley Ott – Director of Engineering	09/29/2026

1.3. Contents

- 1. Scope.....1
 - 1.1. Product Description.....1
 - 1.2. Approvals.....1
 - 1.3. Contents2
 - 1.4. Reference Documents2
- 2. Connection Running3
 - 2.1. Connection Compatibility3
 - 2.2. Thread Compound Application.....3
 - 2.2.1. Approved Compounds3
 - 2.2.2. Compound Amount3
 - 2.2.3. Thread Compound Application3
 - 2.3. Connection Make-Up.....4
 - 2.3.1. General4
 - 2.3.2. Ares™ EUE Torque-Turn Plot4
 - 2.3.3. Make-up Acceptance Criteria5
 - 2.3.3.1. External Shoulder.....5
 - 2.3.3.2. Graph Acceptance5

1.4. Reference Documents

Document Number	Document
FT-RP-000	General Running Procedure
FT-FI-001	Fermata Connections Field Visual Inspection and Repair Requirements

Available online: fermata-connections.com/running-procedures/

*Always confirm the most current Running Procedure through the online portal or by contacting Field Service.

2. Connection Running

For general running see FT-RP-000 General Running Procedure

Fermata® strongly recommends using a Fermata® certified thread representative for all casing runs. If not used, the operator is responsible for ensuring all make-ups meet Fermata® criteria.

See Section 4.1 in the FT-RP-000 General Running Procedure for Field Service details.

2.1. Connection Compatibility

Ares™ EUE does NOT have compatibility with differing weights within the same OD.

2.2. Thread Compound Application

See FT-RP-000 General Running Procedure Section 4.2 for thread compound application.

2.2.1. Approved Compounds

- Fermata® Constrictor® Advanced Thread Sealant.

2.2.2. Compound Amount

Refer to Table 1 for the required thread compound volume:

Table 1: Thread Compound Amount

OD (inches)	Volume (mL)
2.375	2.0
2.875	2.0
3.500	3.0

2.2.3. Thread Compound Application

- Apply thread compound only on the pin connection.
- Coat full thread form (flanks, roots, and crests).

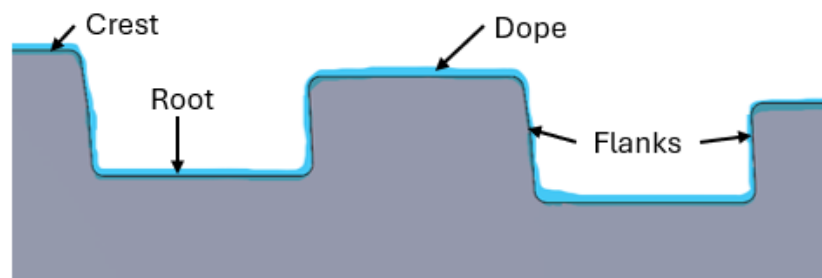


Figure 2 – Thread Form

See Figure 3 and Figure 4 for visual reference.



Figure 3 – Pin Connection Application



Figure 4 – Box Connection (no compound)

2.3. Connection Make-Up

2.3.1. General

See FT-RP-000 General Running Procedure

2.3.2. Ares™ EUE Torque-Turn Plot

- Verify the make-up result against Figure 5.
- For Ares™ EUE, shoulder torque occurs when the pin nose contacts the box shoulder. This event appears as a distinct spike on the torque-turn plot and should occur between 5% and 80% of final make-up torque.

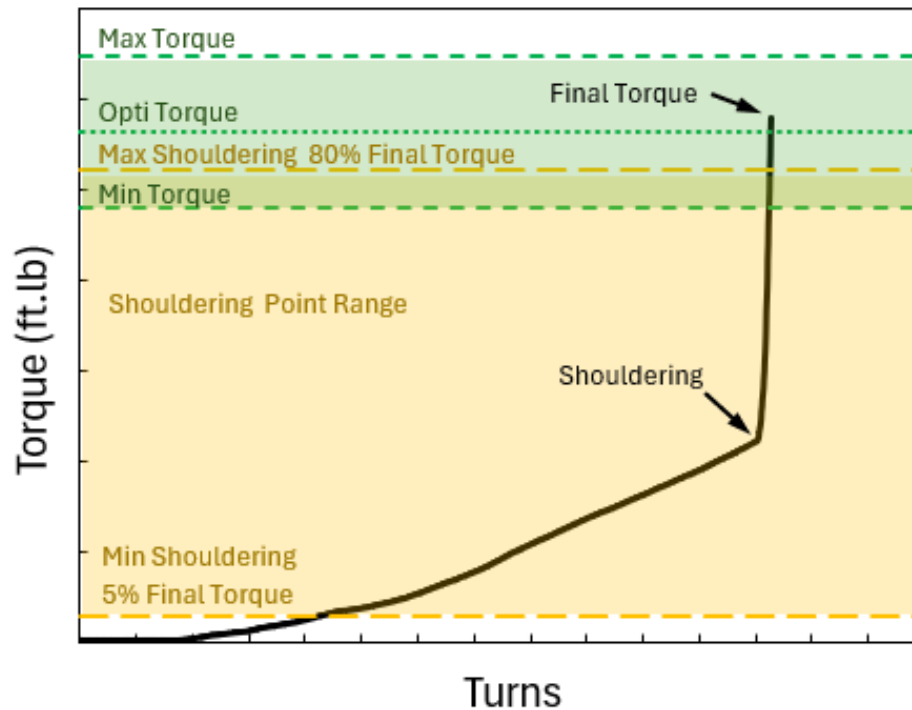


Figure 5 – Ares™ EUE Torque-Turn Signature

2.3.3. Make-up Acceptance Criteria


Connections are accepted based on required graph elements (2.3.2), and external shoulder fully seated.

2.3.3.1. External Shoulder

- Verify connection make-up by confirming the pin external shoulder is fully seated against the box face
- No gap allowed.


2.3.3.2. Graph Acceptance

- Figure 5 shows an example of an acceptable make-up signature.
- Figure 6 shows examples of unacceptable make-up graphs.
- Contact Fermata® Support for any graph irregularity's acceptance.
- See FT-RP-000 General Running Procedure for further examples.

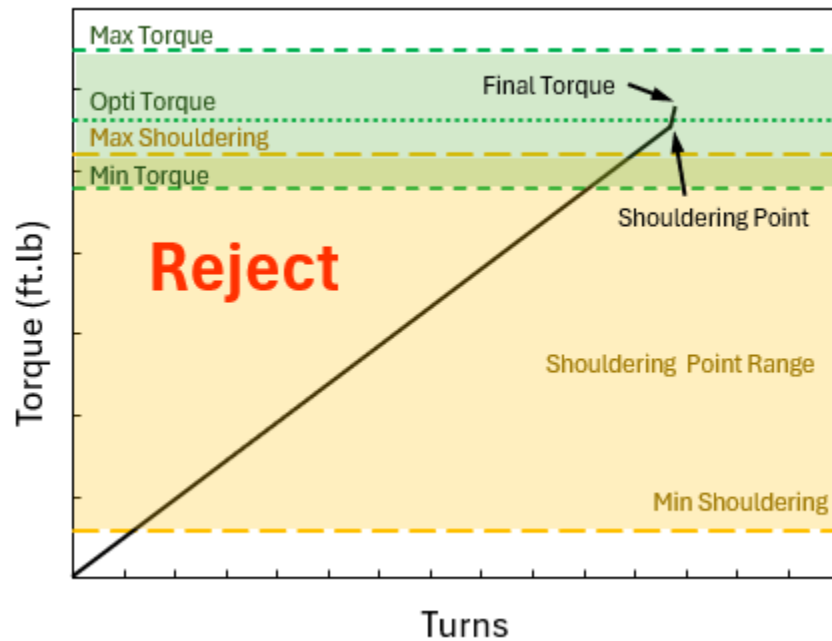


NOTE: High shoulder – Break-out, inspect, and remake to max torque.

(a)

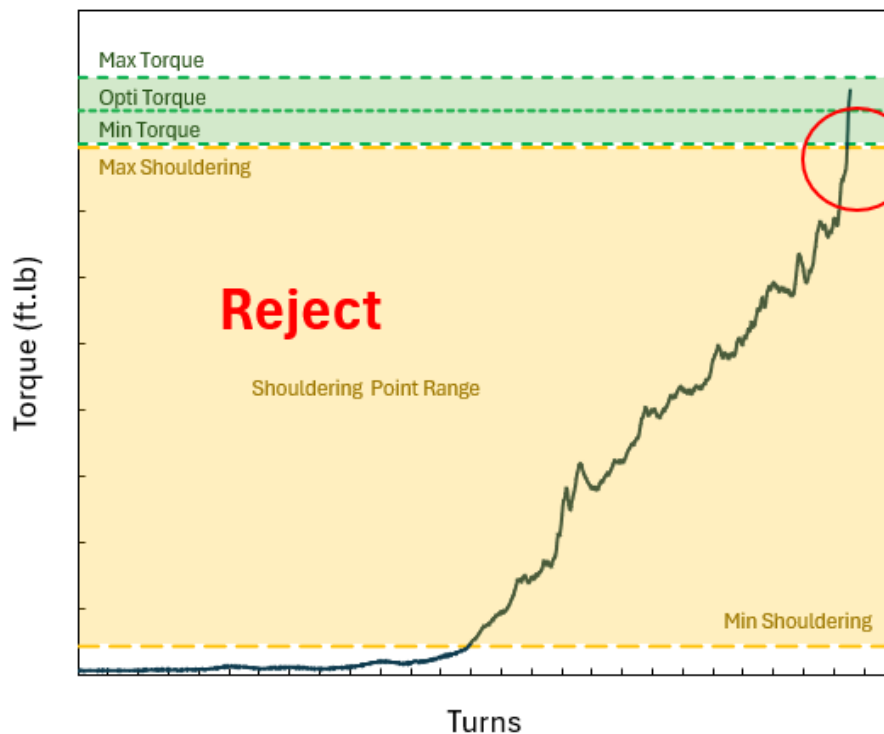

NOTE: Irregular torque build just before the optimum torque is reached. Break-out, inspect the connection, and remake with less thread compound.

(b)

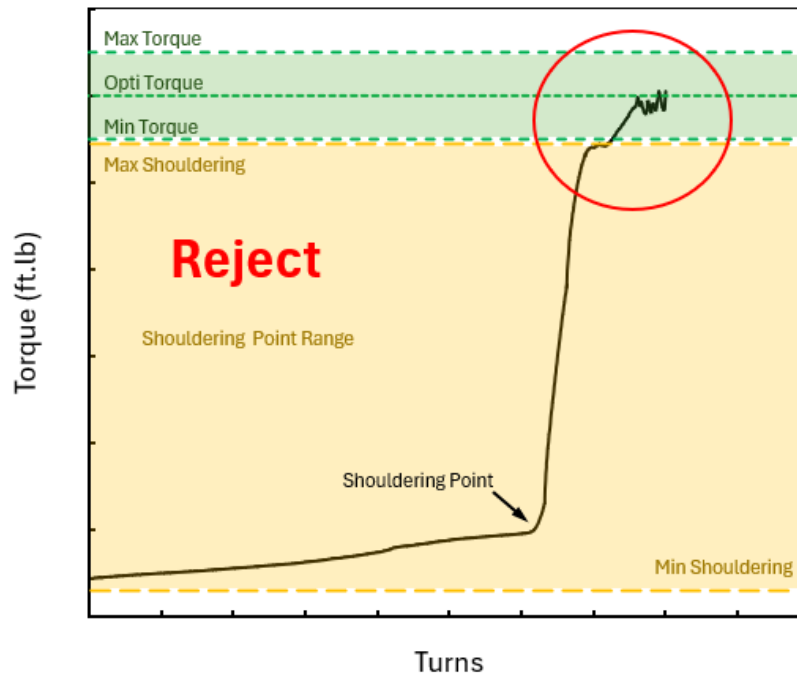

NOTE: Yielding – Break-out, lay down pin and box joint, set aside for inspection.

(c)

Figure 6 – Examples (a), (b) and (c) of unacceptable make-up graphs.

Contact Information:

Technical Support: (281) 941-5257, support@fermata-connections.com

Field Services 24/7 Operations: (855) 322-7104